

## *CLEANING INSTRUCTIONS*

### *Daily*

Mixing unit

Brewer

Beverage outlet

Waste bin

Drip tray

Outside

### *Weekly*

Fan

Instant canister(s)

Bean canister

Coffee chute

Inside



## Daily cleaning: Mixing unit

### General:

In order to maintain a correct operation of the machine the mixing unit should be flushed a number of times a day and cleaned on a daily basis.

In order to flush the machine the flushing programme can be used.

### Procedure:

1. Close the 'orange' slider of the canister(s)
2. Remove the canister(s)
3. Undo the tube from the mixing unit and also remove it from the outlet
4. Turn the fixation ring to the left.
5. Remove the mixing unit and the condense reservoir
6. Remove the mixer
7. Clean the 'orange' seal (A)
8. Clean the shaft (B)
9. Clean the condense reservoir opening (C)
10. Clean the individual parts (dishwasher proof)
11. Remount the mixing unit in reverse order
12. Pay attention to the flat side (D) of the shaft and the mixer opening
13. Reconnect the tube to the mixing unit and replace it in the outlet
14. Replace the canister(s)
15. Open the 'orange' slider of the canister(s)
16. Activate the flushing programme



### Remark:

The parts can be cleaned under the water tap or in the dishwasher.



## Daily cleaning: Brewer

### General:

The brewer has to be cleaned with a brush

### Procedure:

1. Move the waste bin half toward you
2. Push the click finger (A) to the left
3. Move the brewer approx. 10 cm toward you
4. Brush away the loose coffee from the brewer by a brush
5. Slide the brewer back to its original position
6. Replace the waste bin



### Remark:

The brush comes with the machine and can be stored above the brewer in the special notch.




*Daily cleaning:  
Beverage outlet*

**General:**

The beverage outlet must be cleaned.

**Procedure:**

1. Remove the hoses from the brewer and the mixing jug
2. Remove the outlet tray by pulling it down (A)
3. Remove the 'orange' lid
4. Clean the outlet tray, the lid and the hoses
5. Clean the other parts with a damp cloth
6. Install all parts in reversed order
7. Connect the outlet hoses

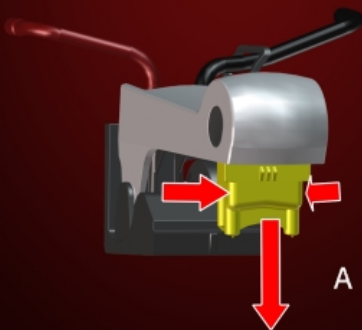

**Remark:**

Make sure that the hoses are placed correctly.

- instant hose (black):  
mixing jug <--> bottom connection of outlet tray
- coffee hose (brown):  
brewer <--> top connection of outlet tray



**General:**

The waste bin must be cleaned.

**Procedure:**

1. Remove the waste bin half toward you
2. Empty the waste bin
3. Clean the waste bin (not dishwasher proof)
4. See to it that the waste bin is completely dry
5. Replace the waste bin
6. Answer the message on the screen with YES  
(waste bin will be set back to 0).

**Remark:**

This procedure is cancelled if you use a waste pipe.



**General:**

The drip tray needs to be emptied and/or cleaned

**Procedure:**

1. Slide the drip tray forward
2. Remove the drip tray grid
3. Empty the drip tray
4. Clean the drip tray (not dishwasher proof)
5. Clean the drip tray grid
6. Check whether the 'red float' is still in place
7. Place back the drip tray grid
8. Slide the drip tray back to the front of the machine

**Remark:**

If the drip tray is connected to a fixed drain:

- weekly cleaning is sufficient (dependent on the contamination)
- it cannot (or hardly) be pulled forward



## *Daily cleaning:*

### *Outside*

#### **General:**

The outside of the machine can be cleaned with a damp cloth

#### **Procedure:**

1. Switch off the machine (due to the touch screen)
2. Clean the outside with a damp cloth
3. Switch the machine back on
4. Clean the drip tray grid with a damp cloth

#### **Remark:**

When cleaning the glass plate at the front of the door the machine should be switched off and no abrasives should be used.



**General:**

Cleaning of the fan and the housing should take place in order to maintain a good steam exhaustion and to avoid obstructions in the ingredient canister.

**Procedure:**

1. Switch off the machine
2. Open the fan to the back
3. Carefully pull the rotor of the motor
4. Clean the rotor (not dishwasher proof)
5. Clean the inside of the housing with a brush and a damp cloth
6. Replace the rotor on the motor
7. Close the fan
8. Switch the machine back on
9. Activate the flushing programme





## *Weekly cleaning: Instant canister(s)*

### **General:**

Cleaning of the ingredient canisters should take place weekly in order to avoid obstructions and jams.

### **Procedure:**

1. Close the outlet by moving the 'orange' slider to the back
2. Take the ingredient canister(s) out of the machine
3. Pour over the ingredients in a dry bowl
4. Unlink the outlet from the ingredient canister
5. Clean the ingredient canister and outlet with a brush (no water!)
6. Refill the ingredient canister(s)
7. Replace the ingredient canister(s) in its/their correct position
8. Open the outlet by moving forward the 'orange' slider
9. Activate the flushing programme

### **Remark:**

Avoid liquids in the ingredient canister(s).



## *Weekly cleaning:*

### *Bean canister*

#### **General:**

The bean canister should be cleaned in order to remove greasy deposits.

#### **Procedure:**

1. Take the bean canister out of the machine  
by pulling it towards you (the openings will be closed automatically)
2. Pour out the beans in a dry bowl
3. Clean the bean canister
4. Refill the bean canister
5. Remove the loose beans from the plate on which the canister rests
6. Replace the bean canister in its correct position
7. Activate the flushing programme

#### **Remark:**

If you clean the bean canister with water, make sure that all parts are very dry before you fill the bean canister again.




**General:**

The coffee chute is placed between the grinder(s) and the brewer and ensures that the coffee ends up in the brewer.

**Procedure:**

1. Slide the bean canister forward in order to take it from the machine
2. Remove the cap
3. Move the attached brush several times back and forth through the opening
4. Replace the cap
5. Replace the bean canister
6. Activate the flushing programme

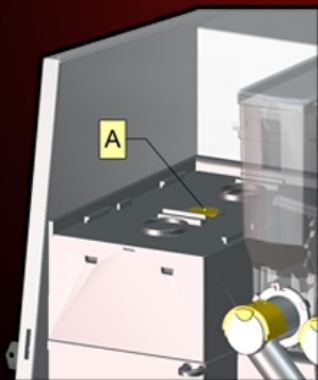

**Remark:**

Avoid objects falling into the chute (beans included), because these can seriously damage the brewer.

Make sure that the hole is capped again!



**General:**

The inside of the machine should be cleaned weekly with a damp cloth.

**Procedure:**

1. Close the (ingredient canister's) outlet by pushing the 'orange' slider to the back
2. Take the ingredient canister(s) out of the machine
3. Take the bean canister out of the machine
4. Remove the waste bin
5. Clean the inside of the machine with a damp cloth
6. Replace the ingredient canister(s) in its/their original position
7. Open the outlet by pulling the 'orange' slider to the front
8. Replace the bean canister
9. Replace the waste bin
10. Activate the flushing programme

