



Recommended daily and weekly cleaning of your Ecomax Plus H603/S

Executing Daily Cleaning

Note: When cleaning, please do not use any chloric, acidic or metal containing additives to clean the machine.

Note: Please do not use any metal brushes.

- a) Drain the machine and switch off.
- b) Open the hood and remove the basket guide track.
- c) Remove the sieve/strainer without allowing any food debris to enter the pump intake.
- d) Clean sieve/strainer and replace.
- e) Using a damp cloth, wipe down around the machine sills and any areas where food debris may settle (hood attachment spine, sills, etc.).
- f) Replace sieve/strainer.
- g) Replace basket guide track.
- h) Leave the hood open for ventilation.

Executing Weekly Cleaning

Note: When cleaning, please do not use any chloric, acidic or metal containing additives to clean the machine.

Note: Please do not use any metal brushes.

- a) Drain the machine and switch off.
- b) Open the hood and remove the basket guide rack.
- c) (depending on model) Hold and push in clip fastener on the wash and rinse arms or un-screw the faster on the wash and rinse arms.
- d) Remove from machine and clean.
- e) Reinsert/screw back the wash and rinse arms.
- f) Leave the hood open for ventilation.