



Pos.	Artikelbeschreibung	Description of item	Artikel Nr./Item No.
1	Kontrolllampe, grün 230V, 14A	Green indicator light 230V, 14A	A039883
2	Kontrolllampe, gelb 230V, 14A	Yellow indicator light 230V, 14A	E0301130005
4	Abdeckung, hinten	Back cover	A040462
5	Abdeckung, vorne	Front cover	A040463
6	Sicherheitsthermostat EGO 230°C	Safety thermostat	016240438
7	Mikroschalter, komplett	Microswitch, complete	016240435
	Mutter z. Mikroschalter	Nut f. microswitch	E0302201242
8	Thermostat EGO 220V, 190°C	Thermostat EGO 220V, 190°C	A039882
9	Knebel z. Thermostat	Knob f. thermostat	E0301110479
10	Zugentlastung	Strain relief	016240434
11	Anschlusskabel m. Stecker	Power cord w. plug	A039896
13	Gehäuse	Housing	A040465
14	Fuß, Gummi, schwarz Ø 30 x 15	Base, rubber, black Ø 30 x 15	A042567
15	Becken	Basin	A040035
16+25	Deckel m. Griff	Lid w. handle	A040916
17+18	Heizkörper	Heating element	A039886
19	Krümelsieb	Crumb sieve	A040917
20	Abdeckung z. Heizkörper	Cover f. heating element	A040924
21	Ersatzkorb 8L, Edelstahl	Substitute basket 8L, stainless steel	165523
22+23	Korbaufhängung	Rod f. hanging basket	016240426
24	Dichtung z. Temperaturfühler	Gasket f. temperature sensor	016240433
25	Griff z. Deckel	Handle f. lid	A040913
o.Abb./no pic.	Schaltkasten, Elektro	Switch box, electric	A040458
o.Abb./no pic.	Stütze m. Verschraubung	Support w. screw connection	A040572
o.Abb./no pic.	Bedienfeldfolie	Control panel sticker	E0303120692



Fritteuse "SNACK IV"  
Artikel-Nr.: A162812E

Ersatzteilliste  
04.01.2016