




Read the operating instructions prior to commissioning

## Operating instructions

# Combisteamer

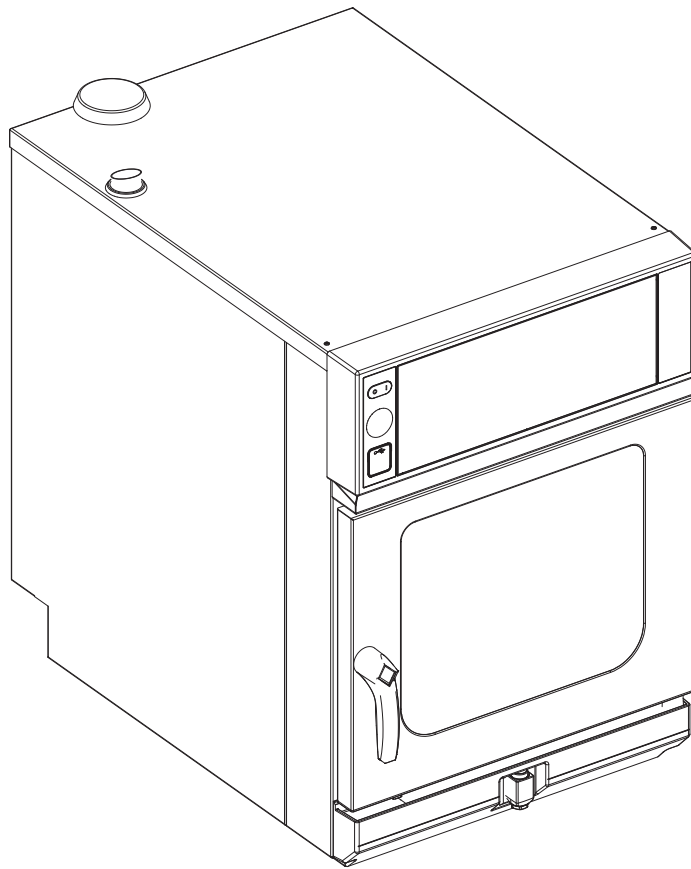


Translation from the original document • 10000008069ABEDEF • 12/05/2023

Unit	Model	Energy type	Design
SpaceCombi Classic	SKECOD610CG 2 EKECOD610CG 2	Electric	HandClean WaveClean (optional) 1-point core temperature sensor 4-point core temperature sensor (optional) Software version 2.3

10000008069ABEBEF

en-GB

## Operating and display elements

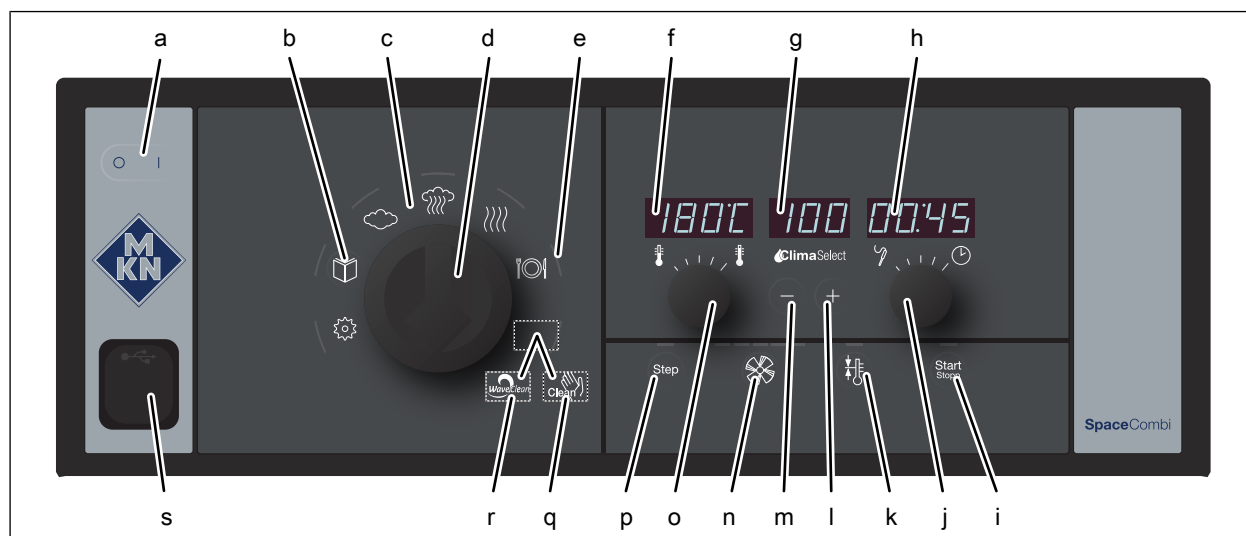

- |   |                      |   |                   |
|---|----------------------|---|-------------------|
| a | On Off "I O" button  | k | Ready2Cook button |
| b | "Program" button     | l | Plus button       |
| c | Selection range      | m | Minus button      |
| d | Select knob          | n | Fan speed button  |
| e | Indicator light      | o | Left knob         |
| f | Left display         | p | "Step" button     |
| g | Middle display       | q | HandClean symbol  |
| h | Right display        | r | WaveClean symbol  |
| i | Right knob           | s | USB port          |
| j | "Start Stopp" button |   |                   |

## **Manufacturer**

MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG  
Halberstädter Straße 2a  
38300 Wolfenbüttel  
Germany

Phone +49 5331 89-0  
Fax +49 5331 89-280  
Internet [www.mkn.com](http://www.mkn.com)

## **Copyright**

All rights to text, graphics and pictures in this documentation are held by MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG. Distribution or duplication is only permitted with the prior written consent of MKN.

Copyright by MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG.



<b>1 Introduction</b> .....	<b>7</b>
<b>1.1 About this manual</b> .....	<b>7</b>
1.1.1 Explanation of signs .....	8
<b>1.2 Intended use</b> .....	<b>9</b>
<b>1.3 Warranty</b> .....	<b>9</b>
<b>2 Safety information</b> .....	<b>10</b>
<b>3 Description of the unit</b> .....	<b>13</b>
<b>3.1 Overview of the unit</b> .....	<b>13</b>
<b>3.2 Features</b> .....	<b>14</b>
3.2.1 Characteristics .....	14
3.2.2 USB port .....	14
3.2.3 HACCP log .....	14
3.2.4 WaveClean automatic cleaning (optional) .....	14
<b>3.3 Operating and cooking modes</b> .....	<b>15</b>
3.3.1 Operating modes .....	15
3.3.2 Cooking modes .....	15
3.3.3 Expanded cooking functions .....	15
3.3.4 Core temperature measurement .....	16
<b>3.4 Operating, control and display element functions</b> .....	<b>17</b>
3.4.1 Abbreviations in the displays .....	19
<b>3.5 Loading capacity</b> .....	<b>20</b>
3.5.1 Plate capacity during regeneration .....	20
3.5.2 Loading capacity .....	20
<b>3.6 Standard setting values</b> .....	<b>20</b>
3.6.1 Temperature standard setting .....	20
3.6.2 Core temperature standard-setting .....	20
3.6.3 Cooking zone humidity standard setting .....	21
3.6.4 Basic settings .....	21
<b>4 Operating the unit</b> .....	<b>23</b>
<b>4.1 Operating the unit in an environmentally responsible manner</b> .....	<b>23</b>
<b>4.2 Switching the unit on and off</b> .....	<b>24</b>
4.2.1 Switching on .....	24
4.2.2 Switching off .....	24
<b>4.3 Opening and closing the cooking zone door</b> .....	<b>24</b>
4.3.1 Open .....	24
4.3.2 Close .....	24
<b>4.4 Loading and emptying the unit</b> .....	<b>25</b>
4.4.1 Loading .....	25
4.4.2 Emptying .....	25
<b>4.5 Making the basic settings</b> .....	<b>25</b>
4.5.1 Opening the Setting menu .....	26

4.5.2 Changing the basic setting .....	26
<b>4.6 Basic functions .....</b>	<b>27</b>
4.6.1 Select cooking mode .....	27
4.6.2 Setting the cooking temperature .....	27
4.6.3 Setting the cooking zone humidity level .....	27
4.6.4 Setting the cooking time .....	28
4.6.5 Setting the core temperature .....	28
4.6.6 Displaying actual values .....	29
4.6.7 HoodIn .....	29
4.6.8 Setting the fan speed .....	29
4.6.9 Preparing a USB flash drive for importing and exporting .....	30
4.6.10 Inserting and removing a USB flash drive .....	30
4.6.11 Displaying the HACCP log number .....	30
4.6.12 Exporting the HACCP log .....	31
4.6.13 Read HACCP log .....	32
<b>4.7 Using the core temperature sensor .....</b>	<b>35</b>
4.7.1 Measuring with a 4-point core temperature sensor .....	36
4.7.2 Measuring the core temperature when cooking frozen food .....	36
<b>4.8 Manual cooking .....</b>	<b>37</b>
4.8.1 Starting the type of cooking .....	37
4.8.2 Cancelling the cooking mode .....	37
4.8.3 Changing the cooking mode .....	37
<b>4.9 User's own cooking programs .....</b>	<b>38</b>
4.9.1 Creating user's own cooking program .....	38
4.9.2 Saving user's own cooking program .....	38
4.9.3 Deleting user's own cooking program .....	39
<b>4.10 Automatic cooking .....</b>	<b>39</b>
4.10.1 Selecting and starting the cooking program .....	39
4.10.2 Ending the cooking program .....	40
4.10.3 Cancelling the cooking program .....	40
4.10.4 Changing the cooking program while cooking .....	40
4.10.5 Saving the cooking program .....	41
<b>4.11 Expanded cooking functions .....</b>	<b>41</b>
4.11.1 Manual humidification .....	41
4.11.2 Setting the start time delay .....	41
4.11.3 Cancelling the start time delay .....	42
4.11.4 Starting Ready2Cook .....	42
4.11.5 Cancelling Ready2Cook .....	43
<b>4.12 Pausing and finishing use .....</b>	<b>44</b>
4.12.1 Perform a hygiene flush after an extended period of idleness .....	44
<b>5 Cleaning and caring for the unit .....</b>	<b>45</b>
<b>5.1 Preventing corrosion .....</b>	<b>45</b>
<b>5.2 Remove rust spots .....</b>	<b>46</b>

1000008069ABEBEF



<b>5.3 Cleaning the housing .....</b>	<b>46</b>
<b>5.4 Cleaning the door handle, operating elements and control panel ..</b>	<b>46</b>
<b>5.5 Cleaning the door seal .....</b>	<b>46</b>
<b>5.6 Cleaning the cooking zone door .....</b>	<b>47</b>
<b>5.7 Cleaning the steam outlet .....</b>	<b>47</b>
<b>5.8 Removing calcium deposits from the unit .....</b>	<b>48</b>
<b>5.9 Cleaning the cooking zone automatically with WaveClean (optional) .....</b>	<b>48</b>
5.9.1 Preparing for cleaning .....	49
5.9.2 Selecting the cleaning level .....	49
5.9.3 Inserting the cleaning cartridge .....	50
5.9.4 Starting automatic cleaning .....	51
5.9.5 Cancelling automatic cleaning .....	51
5.9.6 Ending automatic cleaning .....	52
<b>5.10 Cleaning the cooking zone semi-automatically .....</b>	<b>52</b>
5.10.1 Preparing the cooking zone .....	52
5.10.2 Starting the cleaning program .....	53
5.10.3 Drying the cooking zone .....	54
<b>5.11 Removing and installing the air diverter .....</b>	<b>54</b>
<b>5.12 Inspecting the unit .....</b>	<b>55</b>
5.12.1 Performing a visual inspection .....	55
<b>6 Troubleshooting .....</b>	<b>56</b>
<b>6.1 Emergency mode .....</b>	<b>56</b>
<b>6.2 Causes of errors and remedies .....</b>	<b>57</b>
<b>6.3 Nameplate .....</b>	<b>57</b>
<b>6.4 Determining software version .....</b>	<b>58</b>
<b>7 Carrying out maintenance .....</b>	<b>59</b>
<b>8 Dispose of unit in an environmentally responsible manner .....</b>	<b>60</b>
<b>9 Manufacturer's declaration .....</b>	<b>61</b>

# 1 Introduction

## 1.1 About this manual

The operating instructions are part of the unit and contain information:

- On safe operation,
- On cleaning and care,
- On remedies in case of faults.

Be aware of the following notes and adhere to them:

- Read the operating instructions completely before operating the unit for the first time.
- Make the operating instructions available to the operator at all times at the operating site of the unit.
- Insert any supplements from the manufacturer.
- Keep the operating instructions throughout the service life of the unit.
- Pass on the operating instructions to any subsequent operator of the unit.

**Target group** The target group of the instruction manual is the operator, who is entrusted with the operation, cleaning and care of the unit.

**Figures** All figures in this manual are intended as examples. Discrepancies between these and the actual unit can arise.

## 1.1.1 Explanation of signs



**DANGER**  
**Imminent threat of danger**

Failure to comply will lead to death or very severe injuries.

---



**WARNING**  
**Possible threat of danger**

Failure to comply can lead to death or very severe injuries.

---



**CAUTION**  
**Dangerous situation**

Failure to comply can lead to slight or moderately severe injuries.

---

**ATTENTION**  
**Physical damage**

Failure to comply can cause physical damage.

---



Notes for better understanding and operation of the unit.

---

Symbol / sign	Meaning
•	Listing of information.
→	Action steps, which can be performed in any sequence.
1. 2.	Action steps, which must be performed in the specified sequence.
↳	Result of an action performed or additional information about it.



## 1.2 Intended use

This unit is intended to be used solely for commercial purposes, particularly in commercial kitchens.

This unit may only be used with suitable accessories and for the cooking of food.

**It is forbidden to use the unit for purposes, which include the following:**

- Washing dishes
- As set-down area in or on the unit
- Storing supplies
- Drying cloths, paper or dishes
- Heating acids, alkaline solutions or other chemicals
- Heating preserved food
- Heating flammable liquids
- Heating rooms
- Cleaning air filters

**The use of the unit is prohibited in the following countries:**

- USA
- Canada

## 1.3 Warranty

The warranty is void and safety is no longer assured in the event of:

- Improper conversion or technical modifications of the unit,
- Improper use,
- Incorrect startup, operation or maintenance of the unit,
- Problems resulting from failure to observe these instructions.

## 2 Safety information

The unit complies with applicable safety standards. Residual risks associated with operation or risks resulting from incorrect operation cannot be ruled out and are mentioned specifically in the safety instructions and warnings.

The operator must be familiar with regional regulations and observe them.

**Operation** During operation, the following group of individuals must be supervised by an individual who is responsible for safety:

- Individuals with physical, sensory, or mental handicaps, or who lack the knowledge and experience to operate the unit properly.

The supervising individual must be familiar with the unit and the risks associated with it.

Do not allow children to operate, clean or play with the appliance.

**Hot surfaces Risk of burns from hot surfaces**

- Protect arms and hands by wearing suitable protective gloves.
- Allow surfaces to cool prior to cleaning.
- Remove hot cookware only with suitable protective gloves or potholders.
- Remove containers and baking sheets only with suitable protective gloves or potholders.

**Hot liquids Risk of burns from hot liquids**

- Protect arms and hands by wearing suitable protective gloves.
- Remove, transport and empty containers carefully.

**Risk of chemical burns from evaporating cleaners**

- Follow the instructions of the cleaning agent manufacturer.
- Allow the cooking so to clean to a temperature below 60 °C and then clean.

**Risk of burns from steam**

- Protect arms and hands by wearing protective gloves.
- Do not hold hands in front of the extractor hood.
- First open the cooking zone door slightly and allow the steam to escape. Then open the cooking zone door completely.
- Dry unit completely after cleaning it.

**Defective unit Risk of injury from a defective unit**

- Disconnect a defective unit from the electric mains.
- Do not operate a defective unit.
- Allow only an authorized technician to repair the unit.

**Fire prevention Risk of fire from dirt and grease deposits**

- Clean the unit when finished using it.
- Do not use the unit as a deep fat fryer.
- Clean the cooking zone regularly and remove any fat deposits.

**Risk of fire from overheating**

- Do not store any combustible objects or plastic containers in the cooking zone.

**Firefighting**

- In the event of a fire, disconnect the unit from the electric mains.
- Use a Fire Class F fire extinguisher, never water, to extinguish grease fires. Other fires, for instance, can be extinguished with fire extinguishers suitable for Fire Classes A, B, C, CO<sub>2</sub> fire extinguishers or extinguishing media suitable for the fire class confronted.

**Unit on casters Risk of injury from a unit on casters**

- Move the unit only for cleaning or maintenance.
- Lock casters during operation.
- Only move an empty unit.

**Risk of a line breaking if subjected to high tensile load**

- Secure the unit to the building with a chain for strain relief on the connection lines, so that there is no stress on the connection lines, if the unit moves. The strain relief must be designed for a tensile load of at least 0.6 kN.

**Improper cleaning Risk of chemical burns from cleaning agent**

- Follow the instructions of the cleaning agent manufacturer.
- Take appropriate protective measures when handling aggressive cleaning agents.

**Risk of falling on smooth or slippery floor**

- Keep the floor in front of the unit clean and dry.

**Risk of injury from improper cleaning**

- Clean the cooking zone carefully. The cooking zone sensor protrudes into the cooking zone.

### **Risk of physical damage from improper cleaning**

- Clean the unit after using it.
- Do not clean the unit with a high-pressure cleaner or water jet.
- Do not clean the housing with highly abrasive or chemically aggressive cleaning agents.
- Do not clean the housing with highly abrasive sponges.
- Follow the instructions of the cleaning agent manufacturer.
- Do not cool shock the unit by cooling it abruptly.
- Clean the cooking zone carefully. The cooking zone sensor protrudes into the cooking zone.
- Do not use any bleaching or chlorine-containing cleaners or disinfectants.
- Remove rust spots with an abrasive.
- Keep the unit free of calcium deposits.

### **Hygiene Health risk from insufficient hygiene**

- Observe applicable regional hygiene regulations.

### **Core temperature measurement Risk of injury from overheated core temperature sensor**

- Do not heat the core temperature sensor over an open flame.

### **Improper use Risk of physical damage from improper use**

- Use only original accessories.
- Train operators regularly.
- Do not heat food warmer plates or tins of preserved food.
- Do not cover air inlet and outlet openings.
- Do not operate the unit at temperatures below 4° C.
- Remove the core temperature sensor before the cooked food is removed.
- Insert the core temperature sensor back into the holder after use.

### 3 Description of the unit

The unit is a convection steamer, which is suitable for most cooking methods used in commercial kitchens. It can be used with either Convection or unpressurised live steam, either individually, in sequence, or in conjunction with moist or dry heat.

#### 3.1 Overview of the unit

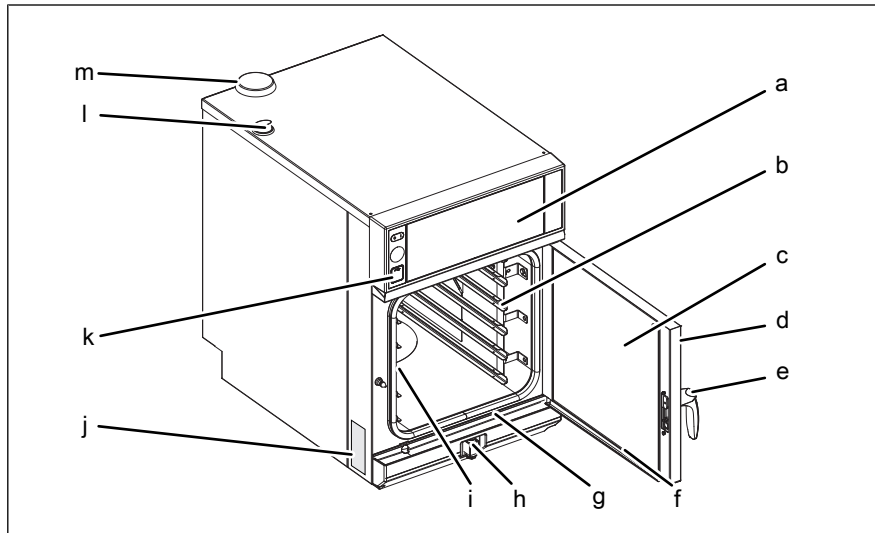


Image: Countertop unit

- |                       |                                     |
|-----------------------|-------------------------------------|
| a Control unit        | h Hand shower (optional)            |
| b Support rack        | i Core temperature sensor (covered) |
| c Insulated window    | j Nameplate                         |
| d Cooking zone door   | k USB port                          |
| e Door handle         | l Steam outlet                      |
| f Drain channel, door | m Air inlet                         |
| g Drain channel, unit |                                     |

### 3.2 Features

#### 3.2.1 Characteristics

- Cooking zone door with hygienic glazing and lighting
- 1-point core temperature sensor
- 4-point core temperature sensor (optional)
- 1-stage door lock
- Power optimisation system (optional)
- Cooking zone door hinged on the right
- Cooking zone door hinged on the left (optional)
- HandClean
- WaveClean (optional)
- Support rack
- USB interface

#### 3.2.2 USB port

The unit is equipped with a USB port (USB 2.0).

HACCP logs can be exported to the USB flash drive and archived on an external PC as necessary.

#### 3.2.3 HACCP log

All cooking steps are recorded with a log number in the HACCP log.

A single log or several logs can be exported in a certain area.

The data are exported via the USB port.

#### 3.2.4 WaveClean automatic cleaning (optional)

With WaveClean automatic cleaning, the cooking zone is cleaned with the aid of a cleaning cartridge intended specifically for the program and then rinsed clean.

## 3.3 Operating and cooking modes

### 3.3.1 Operating modes

#### Manual cooking

In the Manual cooking mode, individual cooking programs and equipment functions can be activated directly. The various cooking modes and equipment functions can be modified individually.



#### Automatic cooking

In the Automatic cooking mode, saved cooking programs can be activated and modified if necessary.

### 3.3.2 Cooking modes



#### Steaming

Steaming is a cooking method that gently cooks food using steam in the temperature range from 30 °C to 130 °C.



#### Combisteaming

Combisteaming is a cooking method that can be used to cook large roasts, casseroles and baked goods at temperatures ranging from 30 °C to 250 °C.



#### Convection

Convection is a cooking mode, in which the food to be cooked is cooked without additional moisture in a temperature range of 30 °C to 300 °C.



#### Regenerate

Regeneration is a cooking mode, in which the food being cooked can be kept warm and prepared in a temperature range of 30 °C to 180 °C.

### 3.3.3 Expanded cooking functions

Expanded cooking functions can be used to modify individual cooking steps for the particular food being cooked.

The following expanded cooking functions are available:

#### Manual humidification

The extended Manual humidification cooking function allows the cooking humidity to be increased during operation.

### Start-time preselection



When using the start time delay, temperatures that promote the growth of harmful microorganisms on the food being cooked can occur in the cooking zone. Observe food processing regulations.

Start-time preselection can be used to set a waiting period until the program starts.

In this way, bottlenecks in production and preparation can be avoided.

The prepared food to be cooked can be loaded into the unit and the desired cooking program selected.



### Ready2Cook (preheating)

For many cooking programs such as baking for example, the correct starting temperature is important.

Ready2Cook allows the cooking zone to be automatically heated up or cooled down to the correct starting temperature.



The function can be selected when starting the cooking program.

### 3.3.4 Core temperature measurement

When using core temperature measurement, the temperature inside the food being cooked is measured by means of a core temperature sensor.


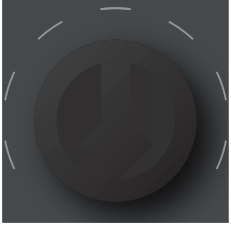











As soon as the target core temperature is reached, the cooking process is ended automatically or, in the case of a multi-step cooking process, the next cooking step starts.

The use of core temperature measurement offers the following benefits:

- Reduced energy and water consumption
- No overcooking
- Less weight lost by the food being cooked
- High HACCP safety

















### 3.4 Operating, control and display element functions

Symbol	Operating and display element	Function
	On Off "OK" button	<ul style="list-style-type: none"> <li>Switch on unit "I"</li> <li>Switch off unit "O"</li> </ul>
	Selection Select knob	<ul style="list-style-type: none"> <li>Selection of cooking modes, cooking programs, cleaning and settings</li> </ul>
	Steaming symbol	<ul style="list-style-type: none"> <li>indicates that the steaming cooking mode can be selected here</li> </ul>
	Combisteam symbol	<ul style="list-style-type: none"> <li>Indicates that the combisteam cooking mode can be selected here</li> </ul>
	Convection symbol	<ul style="list-style-type: none"> <li>Indicates that the convection cooking mode can be selected here</li> </ul>
	Regeneration symbol	<ul style="list-style-type: none"> <li>indicates that the regeneration cooking mode can be selected here</li> </ul>
	Program symbol	<ul style="list-style-type: none"> <li>Selecting a cooking program</li> </ul>
	"Program" button	<ul style="list-style-type: none"> <li>Saving a cooking program</li> </ul>
	HandClean symbol	<ul style="list-style-type: none"> <li>indicates that the semiautomatic cleaning HandClean can be selected here</li> </ul>
	WaveClean symbol	<ul style="list-style-type: none"> <li>Indicates that the WaveClean automatic cleaning can be selected here</li> </ul>
	Settings symbol	<ul style="list-style-type: none"> <li>Selection of settings and service functions</li> </ul>
	Left display	<ul style="list-style-type: none"> <li>shows cooking temperature</li> </ul>
	 Cooking temperature symbols	<ul style="list-style-type: none"> <li>Indicate that settings for the temperature can be made here</li> </ul>
	 Left knob	<ul style="list-style-type: none"> <li>Setting the temperature</li> </ul>

1000008069ABEBEF

## Description of the unit

Symbol	Operating and display element	Function
	Middle display	<ul style="list-style-type: none"> <li>• shows cooking zone moisture</li> </ul>
	 <i>ClimaSelect</i> symbol	<ul style="list-style-type: none"> <li>• indicates that settings for the cooking zone moisture can be made here</li> </ul>
	 <i>Minus</i> button	<ul style="list-style-type: none"> <li>• Reduce the cooking zone moisture</li> </ul>
	 <i>Plus</i> button	<ul style="list-style-type: none"> <li>• Increase the cooking zone moisture</li> </ul>
	Right display	<ul style="list-style-type: none"> <li>• shows cooking time or core temperature</li> </ul>
	 <i>Core temperature</i> symbol	<ul style="list-style-type: none"> <li>• indicates that settings for the core temperature can be made here</li> </ul>
	 <i>Cooking time</i> symbol	<ul style="list-style-type: none"> <li>• indicates that time settings can be made here</li> </ul>
	 Right knob	<ul style="list-style-type: none"> <li>• Setting the cooking time or core temperature</li> </ul>
	"Step" button	<ul style="list-style-type: none"> <li>• Switch to the next step in the cooking program</li> <li>• Acknowledging an error message</li> </ul>
	<i>Fan speed</i> button	<ul style="list-style-type: none"> <li>• For model 6.10: Setting the fan speed</li> </ul>
	<i>Ready2Cook</i> button	<ul style="list-style-type: none"> <li>• Start and end the heating or cooling process</li> </ul>
	"Start Stopp" button	<ul style="list-style-type: none"> <li>• Starting and ending the cooking programs or cleaning</li> </ul>
	Indicator light	<ul style="list-style-type: none"> <li>• lights up when active</li> <li>• confirms setting or selection</li> </ul>
	USB port	

### 3.4.1 Abbreviations in the displays

Information appears in the displays only in the form of abbreviations.

Abbreviation	Explanation
CAr	Cleaning cartridge
CLE	manual cleaning (HandClean)
CL1	Cleaning for about 1 hour (WaveClean)
CL2	Cleaning for about 2 hours (WaveClean)
CL3	Cleaning for about 3 hours (WaveClean)
dLAY	Start time preselection
dIA	Diagnostic error display
End	End
Err	Failure
HAC	HACCP
HOT	Too hot
OPn	Open
OPt	Option
PASS	Password entry
Prot	Log number
Pro	Program number
rdY	Ready
SEr	Service
SFL	Software update
SHo	Trade show mode
SOF	Software
SPU	Forced rinse
StEP	Step
Sto	Saving completed
USb	USB
X-Y	Step X of Y

### 3.5 Loading capacity

#### 3.5.1 Plate capacity during regeneration

Cooking time and cooking temperature are dependent on the number of plates in the cooking zone.

Design	Plate diameter
	28 cm
610	12

#### 3.5.2 Loading capacity

Design	maximum per slide-in unit (kg)	maximum per unit (kg)
610	15	30

### 3.6 Standard setting values

#### 3.6.1 Temperature standard setting

The adjustment range for the cooking zone temperature depends on the cooking mode.

Cooking mode	Standard value (°C)	Adjustment range (°C)	Alteration increments (°C)
Steaming	100	30 - 130	1
Combisteam	150	30 - 250	1
Convection	180	30 - 300	1
Regeneration	50	30 - 180	1

#### 3.6.2 Core temperature standard-setting

The adjustment range for the core temperature depends on the cooking mode.

Cooking mode	Standard value (°C)	Adjustment range (°C)	Alteration increments (°C)
Steaming	70	0 - 99	1
Combisteam	70	0 - 99	1
Convection	70	0 - 99	1
Regeneration	50	0 - 99	1

### 3.6.3 Cooking zone humidity standard setting

The adjustment range for the cooking zone humidity depends on the cooking mode.

Cooking mode	Standard value (%)	Setting range (%)	Change increments (%)
Steaming	100	90 - 110	90 - 100 - 110
Combisteaming	90	20 - 100	20 - 40 - 70 - 90 - 100
Convection	100	0 - 100	0 - 25 - 50 - 75 - 100
Regeneration	100	0 - 100	0 - 25 - 50 - 75 - 100

### 3.6.4 Basic settings

The unit is already preset, when it is delivered. The values in the following list can be adjusted at the parameter level.

Basic setting	Parameters	Standard value	Adjustment range	Explanation
Password	7	111	0 — 300	The password for the basic settings can be changed in this range.
Start-time preselection with or without fan	13	0	0 = Without fan	If the "0" setting is selected, the fan remains off during the preset time period.
			1 = With fan	If the "1" setting is selected, the fan runs at intervals during the preset time period.
HoodIn (Vapour elimination)	48	1	0 = Lower water consumption, large amount of steam in the unit when the cooking chamber door is opened	Setting of the strength of the vapour elimination level . Depending on the setting, cooking method and cooking product, water consumption may be increased.
			1 = Normal	
			2 = Higher water consumption, greatly reduced amount of steam in the unit when the cooking chamber door is opened	
<b>Displays</b>				
Unit of temperature	1	0	0 = °C	Celsius (°C)
			1 = °F	Fahrenheit (°F)
Unit of volume	34	0	0 = ml	Millilitre (ml)
			1 = fl.oz	Fluid ounce (fl.oz.)
	35	0	0 = Imperial (fl.oz.)	Imperial fluid ounce
			1 = U.S. (fl.oz.)	U.S. fluid ounce

1000008069ABEBEF



## Description of the unit

Basic setting	Parameter s	Standard value	Adjustment range	Explanation
<b>Audible signal</b>				
Duration of audible signal	6	20	0 = Signal off 1 — 180 s	Duration of the audible signal
Volume of audible signal	33	0	0 = Quiet	Setting the volume
			1 = Loud	
<b>Cooking modes</b>				
Preselect steaming temperature	9	100	30 °C — 130 °C	Preset the temperature for steaming
Preselect Combisteam temperature	10	150	30 °C — 250 °C	Preset the temperature for Combisteam
Preselect Convection temperature	11	180	30 °C — 250 °C	Preset the temperature for Convection
Preselect regeneration temperature	12	130	30 °C — 180 °C	Preset the temperature for regeneration
<b>Ready2Cook</b>				
Ready2Cook preheating temperature	4	15	0 — 30%	If the unit is fully loaded with a large mass (roasts, loaves of bread), increase the preheating temperature, so that the cooking zone temperature does not drop too suddenly.
Maximum waiting time after Ready2Cook with T < 250 °C	37	120	0 — 300 min	Maximum waiting time after the Ready2Cook temperature is reached, with set value < 250 °C
Maximum waiting time after Ready2Cook with T > 250 °C	38	30	0 — 60 min	Maximum waiting time after the Ready2Cook temperature is reached, with set value > 250 °C
<b>FlexiCombi Air</b>				
Time extension for condensation hood	5	60	0 – 600 s	Time extension for the condensation hood, after the cooking zone door has been opened

## 4 Operating the unit



### Reduction of acrylamide level

Regulation EU 2017/2158 has applied in Europe since 2018-04-11.

This requires that the lowest possible acrylamide level must be achieved when cooking potato products.

MKN therefore recommends the following for potato products:

- Do not exceed a cooking temperature of 220 °C, unless the food manufacturer states, that this is safe for his product.
- Avoid excessive cooking.
- If possible, use pre-blanching products.
- Observe the cooking instructions on the product packaging or otherwise stated by the food manufacturer.



### The drain in the cooking zone must be free during operation.

Before loading the cooking zone

- Remove any food remains from the cooking zone.
- Check the drain sieve for cleanliness.
- Do not place GN containers or trays on the drain in the cooking zone.

### ATTENTION

#### Blockage of the drain in the cooking zone

Food debris, skin and bones can clog the drain and pump.

- For very fatty food, place a sieve or perforated GN container in the lowest rack.
- After each cooking process, take a close look in the cooking chamber and pick up any residues and dispose of them properly.

### 4.1 Operating the unit in an environmentally responsible manner

If used correctly, this Combisteamer achieves very low energy consumption.

Energy consumption is reduced by:

- Avoiding continuous operation - the Combisteamer heats up very quickly, which means that continuous operation is not necessary.
- Loading the cooking zone as fully as possible - if practical, use a Combisteamer with a smaller cooking zone.

### 4.2 Switching the unit on and off

#### 4.2.1 Switching on

- Press the *On Off "I O"* button to "I".  
↳ The unit is now on.

#### 4.2.2 Switching off

- Press the *On Off "I O"* button to "O".  
↳ The unit is now off.

### 4.3 Opening and closing the cooking zone door

#### 4.3.1 Open

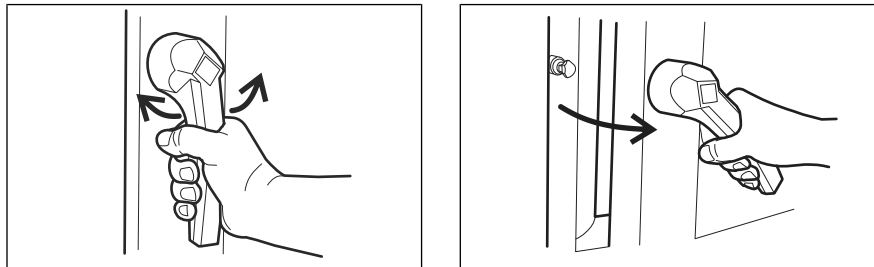


Image: Opening the single-stage door latch

1. Rotate the door handle anti-clockwise or clockwise.  
↳ The cooking zone door opens.



If the door handle is released, it returns automatically to its initial position.

2. Open the cooking zone door completely.

#### 4.3.2 Close

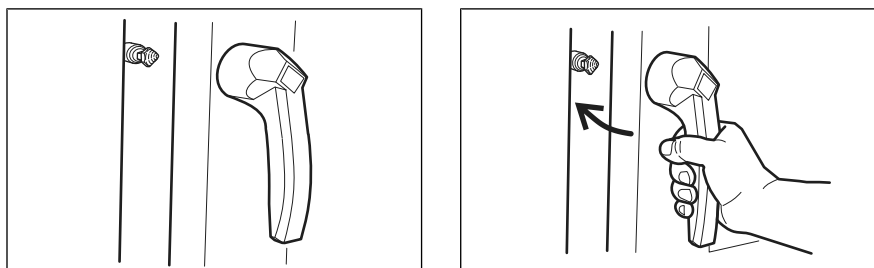


Image: Closing the single stage door latch

**Requirement** Door handle in initial position

- Close the cooking zone door with pressure.  
↳ The cooking zone door is closed.



## 4.4 Loading and emptying the unit



### CAUTION

#### Risk of burns from hot liquid

- Never insert a food-carrying tray with cooking liquid or goods, that will get liquid, above eye level.
- Use only suitable trays to hold food. The food-containing trays must rest securely on the support brackets.
- Always insert the food-containing trays into the U-rails.



### CAUTION

#### Risk of physical damage and personnel injury from exceeding the loading capacity

- Do not exceed the maximum loading capacity.



To not use bent or damaged support racks.

### 4.4.1 Loading

1. Open cooking zone door.
2. Insert food-containing trays into the support racks.
3. Close the cooking zone door.
4. Start the cooking process.

### 4.4.2 Emptying

1. Open cooking zone door.
2. Remove the food-containing trays.
3. Remove all food residues from the drain screen.
4. Leave the cooking zone door slightly ajar.
  - ↳ This extends the service life of the door seal.
  - ↳ No moisture builds up in the cooking zone.

## 4.5 Making the basic settings

The basic settings for operation can be displayed and changed by entering the password "111".



The list of adjustable parameters can be found in the chapter on "Description of the unit".

### 4.5.1 Opening the Setting menu



---

Each basic setting of the unit is stored under a number that can be displayed.

---

**Requirement** Unit switched on

1. Turn the *Selection* control knob to the *Settings* symbol.
  - ↳ Indicator light lights up.
  - ↳ Left display shows "PASS".
  - ↳ "- - -" flashes in right display.
2. Set password using right knob.
  - ↳ Right display shows the set password.
3. Press "Start Stopp" button.
  - ↳ Select "OPt" using left knob.
4. To exit the settings menu, press "Step" button.
  - ↳ Basic settings can be changed.

### 4.5.2 Changing the basic setting

1. Press "Start Stopp" button.
  - ↳ The parameter of the basic setting flashes in left display, (see "Basic settings").
  - ↳ Middle display shows "OPt".
  - ↳ Right display shows the first set value.
2. Turn left knob.
  - ↳ Set number.
3. Press "Start Stopp" button.
  - ↳ Basic setting can be adjusted.
4. Turn right knob.
  - ↳ Set new value.
5. Press "Start Stopp" button.
  - ↳ Apply changes.
6. To exit the settings menu without making any changes, press "Step" button twice.
7. Press "Step" button for 3 seconds.
  - ↳ Changes are saved.
  - ↳ "OPt" flashes in left display.
  - ↳ Middle display shows "Stor".
  - ↳ Unit is restarted.
8. Fill out the commissioning report.

## 4.6 Basic functions

### 4.6.1 Select cooking mode

**Requirement** The unit is on

- Use the *Select* knob to select the type of cooking desired.
  - ↳ The indicator light above the selected type of cooking illuminates.
  - ↳ The left display flashes the preset cooking time.
  - ↳ The right display flashes the cooking time.
  - ↳ The centre display shows the cooking zone humidity for the selected cooking mode.

### 4.6.2 Setting the cooking temperature

#### **ATTENTION** **Increased wear**

Continuous use of the unit with cooking temperatures above 250 °C will result in increased wear.



Image: Cooking temperature set

**Requirement** Cooking mode selected

- Turn the left rotary knob.
  - ↳ Turning to the left lowers the cooking temperature.
  - ↳ Turning to the right raises the cooking temperature.
  - ↳ The left display shows the cooking temperature.

### 4.6.3 Setting the cooking zone humidity level



Image: Cooking zone humidity set

**Requirement** Cooking mode selected

- Press the *Plus* button or the *Minus* button.
  - ↳ The cooking zone humidity level is increased or decreased.
  - ↳ The centre display shows the cooking zone humidity.

### 4.6.4 Setting the cooking time



The cooking time can be set for up to 23 hours and 59 minutes in 1-minute increments.

Continuous operation is stopped automatically after 23 hours and 59 minutes.

The hours and minutes appear in the display.



Image: Cooking time set

**Requirement** Cooking mode selected

→ Turn the right knob.

↳ The right display shows the cooking time.

↳ Rotate to the left, unit switches to continuous operation, right display indicates "- - -".

↳ Rotate to the right, increase cooking time.

### 4.6.5 Setting the core temperature



Image: Core temperature set

**Requirement** Cooking mode selected

→ Turn the right knob to the left beyond continuous operation to core temperature.

↳ The right display shows the standard value for the core temperature.

→ Turn the right knob.

↳ Turning clockwise increases the core temperature.

↳ Turning anti-clockwise lowers the core temperature.

↳ The right display shows the core temperature.

#### 4.6.6 Displaying actual values



The actual cooking zone temperature, elapsed cooking time or actual core temperature can be displayed during cooking.

##### Temperature setpoint

→ Turn the left knob.

↳ The left display shows the current cooking zone temperature for 5 seconds. Then, the temperature setpoint is displayed.

##### Remaining time or actual core temperature

→ Turn the right knob.

↳ The right display shows the elapsed cooking time for 5 seconds. Then, the remaining time or actual core temperature is displayed.

#### 4.6.7 HoodIn



*HoodIn* ensures a reduced amount of vapor in the cooking chamber at the end of a cooking process before the cooking chamber door is opened.

The basic settings of the *HoodIn* function can be changed in the parameters.

Depending on the setting, cooking method and cooking product, water consumption may be increased.

#### 4.6.8 Setting the fan speed



The fan speed can be set only on Model 6.10.



The fan speed is adjusted in up to five steps. Each step is displayed by an indicator light.

The number of steps depends on the type of cooking.

→ Press the *Fan speed* button several times until the desired speed is reached.

↳ The indicator lights illuminate.

### 4.6.9 Preparing a USB flash drive for importing and exporting

**Requirement** USB flash drive is formatted

USB flash drive is not write-protected

1. Create folder structure for importing and exporting.
  2. Create "autoChefImages" folder name.
    - ↳ Data exchange of photos in PNG format, resolution 249x111 pixels.
  3. Create "FCBrowserFiles" folder name.
    - ↳ Data exchange of texts in HTML format.
  4. Create "FCImport" folder name.
    - ↳ Data exchange of Cookbooks.
  5. Create "MMIContent" folder name.
    - ↳ Import data exchange of additional content.
  6. Create "MMiUpdate" folder name.
    - ↳ Data exchange of update files.
- ↳ Once the folder structure has been completed, the USB flash drive is ready for use.

### 4.6.10 Inserting and removing a USB flash drive

#### Inserting a USB flash drive

**Requirement** USB flash drive with a minimum of 2 GB and maximum of 32 GB available storage capacity (not included with delivery)

USB flash drive not write-protected

- Insert the USB flash drive.
- ↳ The USB flash drive is ready after at most 20 seconds.

#### Removing the USB flash drive

**Requirement** Exporting or importing of data completed

- Remove the USB flash drive.

### 4.6.11 Displaying the HAACP log number

**Requirement** The cooking process is running

1. Press the Minus button.
  - ↳ The current log number is displayed.
2. Record the log number.

#### 4.6.12 Exporting the HACCP log



A short press on the "Start Stopp" button transfers the selected reports.

A long press of the "Start Stopp" button (3 seconds) transfers all existing reports.

**Requirement** USB flash drive  
Logged on with password under settings

1. Turn left knob.
  - ↳ "HAC" flashes in left display.
2. Press "Start Stopp" button.
  - ↳ Left display shows the smallest log number.
  - ↳ Middle display shows "HAC".
  - ↳ The highest log number flashes in right display.
3. Turn left and right knobs and select the log area.
4. Press "Start Stopp" button.
  - ↳ Left display shows "HAC".
  - ↳ Middle display shows "USb".
  - ↳ Right display shows consecutive characters.
  - ↳ The HACCP log is exported to the USB flash drive.
5. Press "Step" button.
  - ↳ Back to the settings menu.

4.6.13 Read HACCP log

HACCP Header: Bus Address: 1, Devicetyp: 221, SerialNumber: 15213512, ExportNumber: 4	
a	1 0:Function:;System:Start;;
b	2 542 Program;;Start;;Program:0;
c	2 342 Step;Steaming;Start;Set;Temp:100,Time:720,Coretemp:70,Humidity:100,FanSpeed:5,FanMode:ConL;
d	2 372 Step;Steaming;Measurement;Actual;Temp1:25,Temp2:24,CT1:30,CT2:999;
	2 383 Step;Steaming;Stop;Actual;Temp1:31,Temp2:30,CT1:36,CT2:999;
	2 383 Program;;Stop;;Program:0,EnergyConsumption:27,WaterConsumption:588;
	3 395 Program;;Start;;Program:0;
	3 395 Step;Convection;Start;Set;Temp:180,Time:600,Coretemp:70,Humidity:100,FanSpeed:5,FanMode:Alt;
	3 425 Step;Convection;Measurement;Actual;Temp1:43,Temp2:46,CT1:45,CT2:999;
	3 428 Step;Convection;Update;Set;Temp:180,Time:600,Coretemp:70,Humidity:100,FanSpeed:3,FanMode:Alt;
	3 466 Step;Convection;Update;Set;Temp:180,Time:600,Coretemp:70,Humidity:100,FanSpeed:1,FanMode:Alt;
	3 545 Step;Convection;Measurement;Actual;Temp1:115,Temp2:123,CT1:128,CT2:999;
	3 666 Step;Convection;Measurement;Actual;Temp1:153,Temp2:160,CT1:200,CT2:999;
	3 786 Step;Convection;Measurement;Actual;Temp1:180,Temp2:192,CT1:241,CT2:999;
	3 906 Step;Convection;Measurement;Actual;Temp1:189,Temp2:196,CT1:217,CT2:999;
	3 996 Step;Convection;Stop;Actual;Temp1:192,Temp2:197,CT1:205,CT2:999;
	3 996 Program;;Stop;;Program:0,EnergyConsumption:182,WaterConsumption:0;

Image: Printout HACCP log

- a Device Information
  - b Log number
  - c Timestamp
  - d Cooking process data
- 1 - 6 examples

- Example 1**
1. A cooking step was started as part of a cooking program.
  2. The setpoints are recorded.

3; / 395; / Step; / Convection; / Start; / Set; / Temp:180; / Time:600; / Coretemp:70; / Humidity:100; / FanSpeed:5; / FanMode:Alt;

<b>3</b>	Current log no.	<b>Temp:180</b>	Setpoint cooking zone temperature in °C
<b>395</b>	Seconds since switching on the unit	<b>Time:600</b>	Set point cooking time in seconds
<b>Step</b>	What triggered this recording - here cooking step	<b>Coretemp:70</b>	Core temperature set point in °C
<b>Convection</b>	Cooking mode - here Convection	<b>Humidity:100</b>	Setpoint cooking zone moisture in %
<b>Start</b>	Start of a cooking step	<b>FanSpeed 5</b>	Fan speed setpoint
<b>Set</b>	The following are the setpoints	<b>FanMode:</b> <b>ALT</b>	Fan mode set point





**Example 2** 1. A cooking step was started as part of a cooking program.  
2. The current values are recorded.

3; / 425; / Step; / Convection; / Measurement; / Actual; / Temp1:43, / Temp:2:46, / CT1:45, / CT2:999;

<b>3</b>	Current log no.		<b>Actual</b>	The following are the current values
<b>425</b>	Seconds since switching on the unit		<b>Temp1:43</b>	Cooking zone temperature chamber 1 (top) in °C
<b>Step</b>	What triggered this recording - here cooking step		<b>Temp2:46</b>	Cooking zone temperature chamber 2 (bottom) in °C
<b>Convection</b>	Cooking mode - here Convection		<b>CT1:45</b>	Core temperature internal sensor in °C
<b>Measurement</b>	Measured values are recorded.		<b>CT2:999</b>	Core temperature of external sensor in °C. In this case, no external sensor is connected.

**Example 3** 1. The fan speed setpoint has been changed manually.  
2. The currently valid setpoints are recorded.

3; / 428; / Step; / Convection; / Update; / Set; / Temp:180, / Time:600, / Coretemp:70, / Humidity:100, / FanSpeed:3, / FanMode:Alt;

<b>3</b>	Current log no.		<b>Time:600</b>	Set point cooking time in seconds
<b>428</b>	Seconds since switching on the unit		<b>Coretemp:70</b>	Core temperature set point in °C
<b>Step</b>	What triggered this recording - here cooking step		<b>Humidity:100</b>	Setpoint cooking chamber humidity in %.
<b>Convection</b>	Cooking mode - here Convection		<b>FanSpeed 3</b>	Fan speed setpoint.
<b>Update; Set</b>	Changes have been made to the setpoints of a cooking step		<b>FanMode: ALT</b>	Fan mode set point
<b>Temp:180</b>	Setpoint cooking zone temperature in °C			

**Example 4** 1. A cooking step is continued with the changed setpoints.  
2. The current values are recorded.

3; / 666; / Step; / Convection; / Measurement; / Actual; / Temp1:153, / Temp:2:160, / CT1:200, / CT2:999;

<b>3</b>	Current log no.		<b>Actual</b>	The following are the current values
<b>666</b>	Seconds since switching on the unit		<b>Temp1:153</b>	Cooking zone temperature chamber 1 (top) in °C
<b>Step</b>	What triggered this recording - here cooking step		<b>Temp2:160</b>	Cooking zone temperature chamber 2 (bottom) in °C
<b>Convection</b>	Cooking mode - here Convection		<b>CT1:200</b>	Core temperature internal sensor in °C
<b>Measurement</b>	Measured values are recorded.		<b>CT2:999</b>	Core temperature of external sensor in °C. In this case, no external sensor is connected.

1000008069ABEBEF



- Example 5** 1. A cooking step is terminated.  
2. The current values are recorded.

3; / 996; / Step; / Convection; / Stop; / Actual; / Temp1:192, / Temp2:197, / CT1:205, / CT2:999;

<b>3</b>	Current log no.		<b>Actual</b>	The following are the current values
<b>996</b>	Seconds since switching on the unit		<b>Temp1:192</b>	Cooking zone temperature chamber 1 (top) in °C
<b>Step</b>	What triggered this recording - here cooking step		<b>Temp2:197</b>	Cooking zone temperature chamber 2 (bottom) in °C
<b>Convection</b>	Cooking mode - here Convection		<b>CT1:205</b>	Core temperature internal sensor in °C
<b>Stop</b>	Stop the step		<b>CT2:999</b>	Core temperature of external sensor in °C. In this case, no external sensor is connected.

- Example 6** 1. A manual cooking program has been stopped.  
2. The current consumption values are recorded.

3; / 996; / Program; / ; / Stop; / ; / Program:0, / EnergyConsumption:182, / WaterConsumption:0;

<b>3</b>	Current log no.		;	
<b>996</b>	Seconds since switching on the unit		<b>Program:0</b>	Number of the cooking program - here 0 = manual cooking program
<b>Program</b>	What triggered this recording - here cooking program		<b>EnergyConsumption:182</b>	consumed power in Wh
;	There is no active cooking mode		<b>WaterConsumption:0</b>	amount of water consumed in ml
<b>Stop</b>	Stop - here of a cooking program			

## 4.7 Using the core temperature sensor



### WARNING

#### Risk of injury from a bursting core temperature sensor

- The core temperature sensor can burst as the result of overheating of the measuring tip.
- Never heat a core temperature sensor with an open flame or other heat source.



### CAUTION

#### Risk of burns from hot surfaces

- Grip the core temperature sensor by the handle, remove it from the food being cooked and put it carefully into the holder.
- Protect arms and hands by wearing suitable protective gloves.

### ATTENTION

#### Risk of property damage from improper handling of the core temperature sensor

- Do not let the integrated core temperature sensor hang out of the unit.
- Before removing the food, grasp the core temperature probe by the handle and remove it from the food.



Measuring the core temperature is recommended for all types of cooking to achieve an optimal result.

The unit has a core temperature sensor in the cooking zone and can be equipped with an optional connection for an external core temperature sensor.



A core temperature measurement is always possible, if the core temperature sensor is inserted in the food being cooked. Also before or after a cooking process or during a time-controlled cooking step.

### 4.7.1 Measuring with a 4-point core temperature sensor

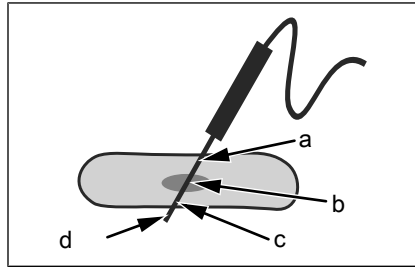


Image: Core temperature sensor with four measuring points

- Insert the core temperature sensor completely into the food being cooked.
- Insert the core temperature sensor into the thickest point of the food being cooked.
- If there is a bone in the food being cooked, insert the core temperature sensor close to the bone.
- When elongated pieces of food are being cooked, insert the core temperature sensor across the food to avoid a hole in the centre of the slice.
- When cooking poultry, insert the core temperature sensor into the inside of the leg.

### 4.7.2 Measuring the core temperature when cooking frozen food

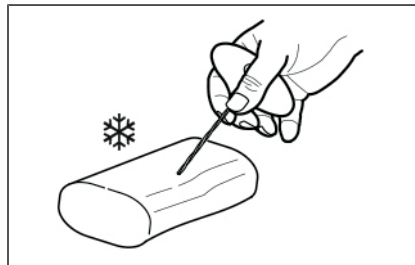


Image: Drilling a hole with a hand drill

1. Use a hand drill to make a hole for inserting the sensor.
2. Place the food to be cooked on the baking sheet or into the cooking pan.
3. Place the cooking sheet or cooking pan into the unit.
4. Insert the core temperature sensor into the food being cooked.

## 4.8 Manual cooking

### 4.8.1 Starting the type of cooking

1. Select the desired cooking mode using the *Selection* control knob.
2. Set cooking temperature.
3. Set cooking time or core temperature.
4. Set cooking zone moisture.
5. Set fan speed.
  - ↳ The number of indicator lights above the *fan speed* button indicates the levels.
6. If necessary: Press *Ready2Cook* button.
7. Load unit when Ready2Cook finished.
8. Insert core temperature sensor into the food being cooked.
9. Press "Start Stopp" button.

### 4.8.2 Cancelling the cooking mode

1. Press "Start Stopp" button.
  - ↳ Cooking mode cancelled.
  - ↳ Indicator light of the selected cooking mode lights up.
  - ↳ Left display shows the preset cooking temperature.
  - ↳ Right display shows the preset cooking time.
2. Open cooking zone door.

### 4.8.3 Changing the cooking mode

1. Press "Step" button.
  - ↳ The indicator light of the cooking mode lights up.
  - ↳ The set cooking temperature flashes in left display.
  - ↳ The set cooking zone moisture flashes in middle display.
  - ↳ The set cooking time flashes in right display.
  - ↳ The number of indicator lights above the *fan speed* button shows the levels.
2. Set cooking time, cooking zone moisture, cooking temperature, target core temperature and fan speed.
  - ↳ The displayed values are automatically applied after 2 seconds.

### 4.9 User's own cooking programs

#### 4.9.1 Creating user's own cooking program

**Requirement** Unit switched on

1. Select the cooking mode for the first cooking step using the *Selection* control knob.
  - ↳ Indicator light lights up.
  - ↳ The preset default values flash in the displays.
2. Set cooking temperature.
3. Set cooking zone moisture.
4. Set fan speed.
5. Set cooking time or core temperature.
6. Press "Step" button.
  - ↳ Indicator light lights up.
  - ↳ Left display shows "StEP" step by step.
  - ↳ Middle display shows "2" for the second cooking step.
7. Select the cooking mode for the second cooking step using the *Selection* control knob.
  - ↳ Indicator light lights up.
  - ↳ The preset default values flash in the displays.
8. Set cooking temperature.
9. Set cooking zone moisture.
10. Set fan speed.
11. Set cooking time or core temperature.
12. Add further cooking steps if necessary.



---

To correct the settings, change to the desired cooking step by pressing the "Step" button several times. Set the values again.

---

#### 4.9.2 Saving user's own cooking program

**Requirement** Cooking program entered

1. Press "Program" button for 3 seconds.
    - ↳ Left display shows "Pro".
    - ↳ The indicator light flashes.
    - ↳ Middle display is off.
    - ↳ Right display shows the first free program position.
  2. Turn right knob and select the number of the program position.
    - ↳ Middle display shows nothing if the program position is free or middle display shows "===" if the program position is occupied.
  3. Press "Program" button for 3 seconds.
    - ↳ The signal sounds.
    - ↳ Middle display shows "===".
- ↳ Cooking program is saved.

### 4.9.3 Deleting user's own cooking program

#### Deleting all programs

- Turn *Selection* control knob to *Program* symbol.
  - ↳ Left display shows "Pro".
- Keep *Plus* button and *Minus* button pressed down simultaneously for 3 seconds.
  - ↳ All cooking programs are deleted.
- ↳ All program positions are free again.

#### Deleting individual cooking programs

- Turn *Selection* control knob to *Program* symbol.
  - ↳ Left display shows "Pro".
  - ↳ Right display shows the number of the cooking program currently selected.
- Select the number of the cooking program to be deleted using right knob.
- Keep *Minus* button pressed down for 3 seconds.
  - ↳ Cooking program is deleted.
- ↳ Program position is free again.

## 4.10 Automatic cooking

### 4.10.1 Selecting and starting the cooking program

**Requirement** No cooking program selected

- Turn *Selection* control knob to *Program* symbol.
  - ↳ Left display shows "Pro".
  - ↳ Right display shows the number of the saved cooking program or right display shows "1" if no cooking program is saved.
- Turn right knob and select the number of the program position.
  - ↳ Middle display shows nothing if the program position is free or middle display shows "==" if the program position is occupied.
- For immediate start: Press "Start/Stop" button. For starting with Ready2Cook: Press *Ready2Cook* button.
  - ↳ Program is loaded and starts.

### 4.10.2 Ending the cooking program



---

The cooking program ends once the cooking time has elapsed or the core temperature has been reached.

---

1. Cooking program ended automatically.
  - ↳ The signal sounds.
  - ↳ Right display shows "End".
  - ↳ Indicator lights go out.
2. Press "Start Stopp" button or open cooking zone door door.
  - ↳ Signal is switched off.

### 4.10.3 Cancelling the cooking program

1. Press "Start Stopp" button.
  - ↳ Cooking program cancelled.
  - ↳ Indicator light of the selected cooking mode lights up.
  - ↳ Left display shows the preset cooking temperature.
  - ↳ Right display shows the preset cooking time.
2. Open cooking zone door.

### 4.10.4 Changing the cooking program while cooking



---

The cooking time, cooking zone humidity, cooking temperature, and target core temperature, or on Model 6.10 the fan speed, can be changed during cooking. These changes apply only to the currently running cooking program and are not retained as presets.

---



---

For multi-step cooking programs, press "Step" button repeatedly until the middle display shows the desired cooking step.

---

1. Press "Step" button.
  - ↳ The indicator light of the cooking mode lights up.
  - ↳ The set cooking temperature flashes in left display.
  - ↳ The set cooking zone moisture flashes in middle display.
  - ↳ The set cooking time flashes in right display.
  - ↳ The number of indicator lights above the *fan speed* button shows the levels.
2. Set cooking time, cooking zone moisture, cooking temperature, target core temperature and fan speed.
  - ↳ The displayed values are automatically applied after 2 seconds.



### 4.10.5 Saving the cooking program

**Requirement** Cooking program entered

1. Press "Program" button for 3 seconds.
    - ↳ Left display shows "Pro".
    - ↳ The indicator light flashes.
    - ↳ Middle display is off.
    - ↳ Right display shows the first free program position.
  2. Turn right knob and select the number of the program position.
    - ↳ Middle display shows nothing if the program position is free or middle display shows "===" if the program position is occupied.
  3. Press "Program" button for 3 seconds.
    - ↳ The signal sounds.
    - ↳ Middle display shows "===".
- ↳ Cooking program is saved.

## 4.11 Expanded cooking functions

### 4.11.1 Manual humidification



This function is not programmable.

**Requirement** Cooking program selected and started

- Press and hold the *Plus* button.
- ↳ The centre display shows a slowly increasing bar. The cooking zone humidity level is increased.

### 4.11.2 Setting the start time delay



If the fan option is selected at the start time delay, the fan switches on in short intervals until the start time is reached.

**Requirement** Cooking program selected or a manual cooking program created

1. Press "Start Stopp" button for 3 seconds.
  - ↳ Left display shows "dLAY".
  - ↳ "00:01" flashes in right display.
2. Turn right knob to the left or the right.
  - ↳ Right display shows the selected duration until the start.
3. Press *fan speed* button.
  - ↳ The middle indicator light of the *fan speed* button lights up.

4. Press "Start Stopp" button.
  - ↳ Start time preselection starts.
  - ↳ The indicator light of the "Start Stopp" button lights up.
  - ↳ Right display shows the remaining time until the start and the colon in the time display flashes.
  - ↳ The cooking zone goes out.
- ↳ The set cooking program starts automatically after the duration has elapsed.

### 4.11.3 Cancelling the start time delay

- Press "Start Stopp" button.
- ↳ Start time preselection is cancelled.
  - ↳ Cooking zone light lights up.

### 4.11.4 Starting Ready2Cook



---

The unit is brought to the correct starting temperature with Ready2Cook.

---

#### Preselected temperature

**Requirement** Cooking program selected or a manual cooking program created

1. Press *Ready2Cook* button briefly.
  - ↳ The temperature of the cooking zone is set to 15% above the set start temperature.
  - ↳ The indicator light of the *Ready2Cook* button flashes.
  - ↳ Indicator light of the "Start Stopp" button flashes.
  - ↳ Left display shows the current cooking zone temperature.
  - ↳ Right display shows the start temperature.
  - ↳ Signal sounds when the start temperature is reached.
  - ↳ Left display shows "rdY".
2. Open cooking zone door.
  - ↳ Signal is switched off.
  - ↳ The indicator light of the *Ready2Cook* button goes out.
  - ↳ The displays show the current setting values for the selected cooking program.
3. Load the unit.
4. Close cooking zone door.
  - ↳ The set cooking program starts automatically.

### Maximum heat-up temperature

**Requirement** Cooking program selected or a manual cooking program created

1. Press *Ready2Cook* button for 3 seconds.
  - ↳ The cooking zone is heated up to 275 ° C.
  - ↳ The indicator light on the *Ready2Cook* button flashes.
  - ↳ Indicator light of the "Start Stopp" button flashes.
  - ↳ Left display shows the current cooking zone temperature.
  - ↳ Right display shows the start temperature.
  - ↳ Signal sounds when the start temperature is reached.
  - ↳ Left display shows "rdY".
2. Open cooking zone door.
  - ↳ Signal is switched off.
  - ↳ Indicator light on the *Ready2Cook* button goes out.
  - ↳ The displays show the current setting values for the selected cooking program.
3. Load the unit.
4. Close cooking zone door.
  - ↳ The set cooking program starts automatically.

#### 4.11.5 Cancelling Ready2Cook

- Briefly press the *Ready2Cook* button.
  - ↳ Ready2Cook stops.
  - ↳ The indicator light for the *Ready2Cook* button goes out.
  - ↳ The set cooking program starts automatically.

### 4.12 Pausing and finishing use

Switch off the unit during pauses and at end of use.

#### 4.12.1 Perform a hygiene flush after an extended period of idleness

For reasons of hygiene, flush the water lines in the unit and on-site water lines before using the unit.

##### **Production stop of more than 2 days**

**Requirement** GN Containers, baking trays and Grates removed from the cooking zone

No food in the cooking chamber

1. Rinse out the cooking zone thoroughly with clear water.
2. Operate steaming cooking mode for 7 minutes at 100°C.

##### **Production stops of more than 7 days**

**Requirement** GN Containers, baking trays and Grates removed from the cooking zone

No food in the cooking chamber

1. Rinse out the cooking zone thoroughly with clear water.
2. Operate steaming cooking mode for 1 hour at 100°C.

## 5 Cleaning and caring for the unit



### CAUTION

#### Risk of burns from hot surfaces

- Allow surfaces to cool prior to cleaning.



### CAUTION

#### Risk of chemical burns from cleaning agent

- Follow the instructions of the cleaning agent manufacturer.
- Take appropriate protective measures when handling aggressive cleaning agents.

### ATTENTION

#### Risk of physical damage from extremely abrupt cooling

- Do not cool shock the unit by cooling it abruptly.

### ATTENTION

#### Risk of physical damage from improper cleaning

- Do not clean the unit with a high-pressure cleaner or water jet.

### 5.1 Preventing corrosion

- Keep the surfaces of the unit clean and with access to air.
- Remove lime, grease, starch and protein deposits from the surfaces of the unit.
- Remove salt accumulations.
- Only expose parts made from non-rusting steel to brief contact with highly acidic foods, spices, salts or the like.
- Avoid damaging the stainless steel surface with other metal items, such as for example steel spatulas or steel wire brushes.
- Avoid contact with iron and steel, such as for example steel wool and steel spatulas.
- Do not use bleaching or chlorine-containing cleaning agents.
- Clean the contact surfaces with water.

### 5.2 Remove rust spots

- Remove fresh rust spots immediately with a mild abrasive or fine sandpaper.
- Always remove rust spots completely.
- Expose treated areas to fresh air for at least 24 hours. During this time, do not allow any contact with greases, oils or foods so that a new protective layer can form.

### 5.3 Cleaning the housing

**Requirement** Unit switched off and cooled down

→ Clean the housing with warm water and commercially available washing-up liquid.

### 5.4 Cleaning the door handle, operating elements and control panel

---

#### **ATTENTION**

#### **Risk of property damage from improper cleaning**

- Do not clean the surface with highly abrasive or chemically aggressive cleaning agents.
  - Do not clean the surface with highly abrasive sponges.
- 

**Requirements** Unit is disconnected

→ Clean the door handle, operating elements and control panel with a damp cloth and commercially available detergent.

### 5.5 Cleaning the door seal

---

#### **ATTENTION**

#### **Risk of physical damage from improper cleaning**

Animal fats in combination with high temperatures can damage the door seal very quickly if it is not maintained properly.

- Clean the door seal regularly.
  - Do not use aggressive cleaners.
- 



During automatic cleaning and semi-automatic cleaning, the outside surface of the door seal is not cleaned.

The door seal must be cleaned separately.

---



If the unit is used primarily for roasting, also clean the door seal during pauses in use.

---

→ When finished using the unit, clean the door seal with warm water and a commercially available detergent.

## 5.6 Cleaning the cooking zone door



### CAUTION

#### Risk of burns from hot surfaces

- Allow surfaces to cool prior to cleaning.

### ATTENTION

#### Risk of physical damage from improper cleaning of the surface

- Do not use abrasive cleaners or cloths.
- Do not use grill cleaners.

### ATTENTION

#### Risk of property damage from improper cleaning

- Do not clean the surface with highly abrasive or chemically aggressive cleaning agents.
- Do not clean the surface with highly abrasive sponges.

→ Remove residual calcium deposits from the glass window with vinegar or citric acid.

## 5.7 Cleaning the steam outlet

### ATTENTION

#### Risk of physical damage from deposits

- Check the steam outlet and connected piping for deposits.



Use a liquid cleaner containing at most 20% sodium or potassium hydroxide.

Flushing with water is not necessary.

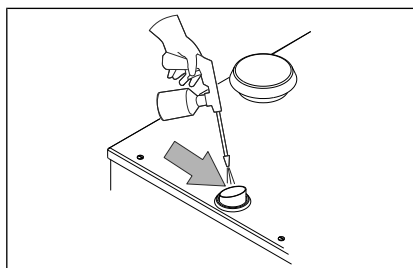


Image: Cleaning the steam outlet

1. Examine the steam outlet and connected piping for deposits.
2. Spray liquid cleaner into the steam outlet.

### 5.8 Removing calcium deposits from the unit



For manual descaling, fill commercially available descaler into manual spray gun.

---

**Requirement** Cooking zone temperature less than 40 °C  
Cooking zone cleaned

1. Spray commercially available descaler into the cooking zone.
2. Allow to act for 30 minutes.
3. Rinse cooking zone thoroughly.
4. Examine the cooking zone for any remaining calcium deposits.
5. If necessary, repeat the decalcification.
6. Open the cooking zone door and leave it open with a slight gap until the unit is used again.
  - ↳ This extends the service life of the door seal.
  - ↳ No moisture builds up in the cooking zone.

### 5.9 Cleaning the cooking zone automatically with WaveClean (optional)



**CAUTION**  
**Risk of chemical burns**

Keep the cooking zone door closed during the cleaning procedure.

---



The use of unsuitable cleaning agents often causes damage to units. MKN makes great efforts to be able to offer a cleaning agent, which on the one hand achieves an outstanding cleaning performance, but which on the other hand does not attack and damage the convection steamer. We therefore recommend that only our cleaning agent is used. MKN does not assume any responsibility or liability for damage, which is caused by unsuitable cleaning agents. Claims against MKN that are due to this can not be upheld, not even within the scope of the guarantee or warranty.

---



It is not permitted to cool the temperature sensor down in order to start the cleaning procedure more quickly. The whole cooking zone must be cooled down to 60 °C for effective cleaning.

---



Depending on the cleaning level selected, the fan may be idle for up to 60 minutes. This is not a cancellation of the cleaning but part of the cleaning program.

---





Automatic forced rinse is triggered in the following situations.

- Cleaning is cancelled manually. Cancelling within the first 10 minutes of cleaning does not trigger an automatic forced rinse.
- Cleaning is cancelled automatically in the event of a fault.
- The Combisteamer is switched off and then back on during cleaning. The automatic forced rinse begins when the unit is switched back on.



If the automatic forced rinse is cancelled, it starts again from the beginning.

It is not possible to start a cooking program, before the forced rinse is ended.

### 5.9.1 Preparing for cleaning

#### ATTENTION

#### Risk of physical damage from improper cleaning

- Do not clean the unit with a high-pressure cleaner or water jet.

**Requirement** GN containers, baking trays and grates removed from the cooking zone

1. Remove any food remains from the cooking zone.  
↳ The drain screen is not obstructed.
2. Leave only the support rack in the cooking zone in countertop units, and leave only the tray trolley in the cooking zone in floor-standing units.
3. Close the cooking zone door.

### 5.9.2 Selecting the cleaning level



If the water pressure falls during cleaning, the cleaning program reverts to maintenance status. When the water pressure is restored again, the cleaning program runs automatically.



Despite different cleaning times, all cleaning levels required the same amount of water.

#### Tip

In the case of automatic cleaning overnight, we recommend the "normal" or "extra" cleaning levels. This ensures that there is sufficient drying.

### Requirement Unit switched on

1. Use the *Selection* control knob to select *WaveClean*.
  - ↳ Indicator light lights up.
  - ↳ The last selected cleaning level flashes in left display.
2. Turn left knob and select a cleaning level.
  - ↳ At cleaning level 1 with a cleaning time of about 1 hour, the display shows "CL1".
  - ↳ At cleaning level 2 with a cleaning time of about 2 hours, the display shows "CL2".
  - ↳ At cleaning level 3 with a cleaning time of about 3 hours, the display shows "CL3".
- ↳ Left display shows the selected cleaning level.
3. Press "Start Stopp" button.
  - ↳ If cooking zone temperature too high, the right display shows "HOT" or if cooking zone temperature too low, the right display shows "--:--".
  - ↳ Indicator light on the *Ready2Cook* button flashes.
  - ↳ A signal sounds when the cleaning temperature is reached.
  - ↳ Middle display shows cleaning level.
  - ↳ Right display shows "CAr".

### 5.9.3 Inserting the cleaning cartridge



Never operate the unit in the automatic cleaning mode without a cleaning cartridge.

If there is a high level of contamination, select the "CL3" cleaning level and use 2 cleaning cartridges.

---



Use only cleaning cartridges with an undamaged wax seal.

If the wax seal is damaged, the cleaner can enter the cleaning circuit prematurely or not dissolve completely, so that complete cleaning is no longer assured.

Insert the cleaning cartridges only when requested to do so.

---

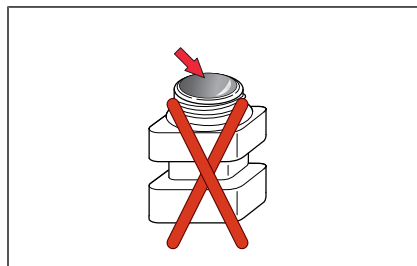


Image: Wax seal on the cleaning cartridge damaged

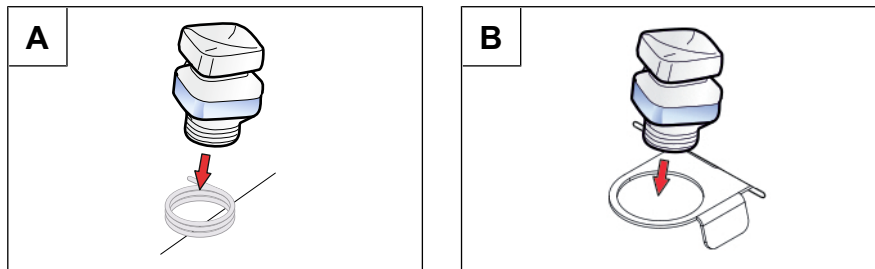


Image: A: Inserting the cartridge into the spring holder; B: Inserting the cartridge into the holder

**Requirements** Cleaning cartridges sealed and undamaged

1. Open the cooking zone door.
2. Open the lid of the cartridge.
3. Insert the cartridge into the holder on the air diverter.
4. Close the cooking zone door.
  - ↳ The centre display shows the selected cleaning level.
  - ↳ "CAR" appears on the right display.

**5.9.4 Starting automatic cleaning**

**Requirement** Water connection open

Unit switched on

Cooking zone temperature at 60 °C

- Press "Start Stopp" button.
  - ↳ Indicator lamp of the button flashes.
  - ↳ Middle display shows the selected cleaning level.
  - ↳ Right display shows the remaining time.

**5.9.5 Cancelling automatic cleaning**

- Press "Start Stopp" button.
  - ↳ Cleaning program cancelled.
  - ↳ Left display shows "End".
  - ↳ Middle display shows the selected cleaning level.
  - ↳ "CAR" flashes in right display.
- ↳ Automatic cleaning cancelled.



On cancellation, automatic rinsing of the cooking zone is initiated.

### 5.9.6 Ending automatic cleaning

**Requirement** Automatic rinsing has stopped after the cleaning program was cancelled or the cleaning time has elapsed

1. Open cooking zone door.
2. Remove the empty cleaning cartridge.
3. Use the hand shower to thoroughly rinse out any remaining cleaner or rinsing agent.
4. Close cooking zone door.
  - ↳ After the cooking zone door is closed, the cleaning program is completed.
5. Empty any droplets of the cleaning water from the collection container of the tray trolley and flush it afterwards with a soft water jet.
6. Flush away any droplets of cleaning water on the floor in front of the unit with a soft water jet.
7. Leave the cooking zone door open with a slight gap until the unit is to be used again.
  - ↳ This extends the service life of the door seal.
  - ↳ No moisture builds up in the cooking zone.

## 5.10 Cleaning the cooking zone semi-automatically

### 5.10.1 Preparing the cooking zone

---

#### **ATTENTION**

#### **Risk of physical damage from improper cleaning**

- Do not clean the unit with a high-pressure cleaner or water jet.
- 

**Requirement** GN containers, baking sheets and grates removed from the cooking zone

1. Remove any food remains from the cooking zone.
  - ↳ The drain screen is not obstructed.
2. Leave only the support rack in the cooking zone.
3. Close the cooking zone door.

## 5.10.2 Starting the cleaning program



### CAUTION Dangerous situation

Failure to observe precautions can result in slight to moderately severe injuries.

- Wear protective clothing.
- Wear breathing protection.

### ATTENTION Risk of physical damage from exceeding the recommended acting time of the cleaner

- Do not allow the cleaner to act longer than specified by the program.

#### Requirement Unit switched on

1. Use *Selection* control knob to select *HandClean* or *WaveClean*.
2. The last selected cleaning program flashes in left display.
3. Set display to CLE using left knob.
  - ↳ Indicator light lights up.
  - ↳ "CLE" flashes in middle display.
4. Press "Start Stopp" button.
  - ↳ Cleaning program starts. The cooking zone is heated or cooled.
  - ↳ Right display shows "HOT" when cooling down or right display shows "--:--" when heating up.
  - ↳ Until the cooking zone temperature is reached.
5. The soaking process starts automatically.
  - ↳ Right display shows the remaining soaking time.
6. Soaking time expired.
  - ↳ "SPr" flashes in right display.
  - ↳ Left display shows "CLE".
7. Wear protective clothing, safety glasses and protective gloves.
8. Open cooking zone door.
9. Spray cooking zone, heating register and fan wheel with cleaning agent.
10. Close cooking zone door.
11. Acting time starts automatically.
  - ↳ Right display shows the remaining acting time.
  - ↳ Indicator light of the "Start Stopp" button flashes.
12. Acting time expired.

13. Cleaning time starts automatically.
  - ↳ Right display shows the remaining cleaning time.
  - ↳ Cleaning time has expired.
  - ↳ Right display shows "SHO".
14. Press "Start Stopp" button.
  - ↳ Rinse cooking zone thoroughly.
15. Press "Start Stopp" button.
  - ↳ Cleaning finished.

### 5.10.3 Drying the cooking zone

**Requirement** Cooking his own door closed

1. The drying process starts automatically.
  - ↳ The indicator light over the *Convection* symbol illuminates.
  - ↳ The right display shows the remaining time.



The cooking zone is heated.

---

2. After the end of the drying process, a signal sounds.
  - ↳ "End" appears on the right display.
3. Open the cooking zone door and leave it ajar until the unit is used again.
  - ↳ This extends the service life of the door seal.
  - ↳ No moisture builds up in the cooking zone.

### 5.11 Removing and installing the air diverter



---

**CAUTION**  
**Pinch hazard from rotating fan**

- Prior to working on the unit, ensure that the unit has been disconnected from the mains.
  - Do not operate the unit without the air diverter.
- 

#### **Removing the air diverter**

**Requirement** Unit has been switched off

1. Remove core temperature sensor from holder.
2. Remove right and left support rack.
3. Remove the water inlet pipe using a tool.
4. Remove the air diverter from the bolts.

#### **Installing air diverter**

1. Place air diverter on the bolts.
2. Install water inlet pipe using tool.
3. Insert right and left support rack.
4. Insert core temperature sensor in the holder.

## 5.12 Inspecting the unit

### 5.12.1 Performing a visual inspection

---

#### **ATTENTION**

#### **Risk of physical damage from improper inspection**

- Inspect in accordance with the inspection intervals.
  - Has inspection performed by a proficient operator.
  - In the event of damage or signs of wear, contact Customer service immediately and do not operate the unit any longer.
- 

**Requirement** Unit disconnected from power

Unit empty and cleaned

Cooking zone door opened completely

→ Inspect housing, cooking zone door and cooking zone yearly for deformation and damage.

↳ Visual inspection has been performed.

# 6 Troubleshooting



Image: Left, centre and right displays

If an error occurs during operation, the error group and the error number within the group are displayed.

- The left display shows the error group.
- The right display flashes the error number.

For a remedy, give customer service the error group and error number displayed.

## 6.1 Emergency mode

In order to allow limited use in case of error, the unit has several different emergency programs. Emergency operation is activated automatically and displayed. After elimination of the error indicated, the controls switch back into normal operation automatically. A reset is not necessary.



---

Emergency programs handle the limited further operation of the appliance until servicing. Deviating cooking results and temperature deviations are possible.

---



## 6.2 Causes of errors and remedies

Fault group	Fault no.	Failure	Possible causes	Remedy
04	04	No water	<ul style="list-style-type: none"> <li>Water valve closed</li> <li>Unit defective</li> </ul>	<ul style="list-style-type: none"> <li>Open the water valve</li> <li>Contact Customer service</li> </ul>
07	10	Cooking zone sensor is defective	<ul style="list-style-type: none"> <li>Sensor failure</li> </ul>	<ul style="list-style-type: none"> <li>The core temperature sensor is used as a substitute sensor</li> <li>Do not insert the core temperature sensor into the food to be cooked</li> <li>The core temperature sensor must remain in the cooking zone</li> <li>Contact Customer service</li> </ul>
• 07	16	Vapour sensor defective	<ul style="list-style-type: none"> <li>Sensor failure</li> </ul>	<ul style="list-style-type: none"> <li>Contact Customer service</li> </ul>
• 07	17	Humidity sensor defective	<ul style="list-style-type: none"> <li>Sensor failure</li> </ul>	
• 07	18	Excess temperature in the cooking zone	<ul style="list-style-type: none"> <li></li> </ul>	
• 07	40	Core temperature sensor is defective	<ul style="list-style-type: none"> <li>Sensor failure</li> </ul>	<ul style="list-style-type: none"> <li>Contact Customer service</li> </ul>
• 07	50	Electronics too hot	<ul style="list-style-type: none"> <li>Ambient temperature around the electronics is too high</li> <li>Heat sources in the vicinity of the air inlet</li> <li>Air inlet clogged or blocked</li> <li>Cooling defective</li> </ul>	<ul style="list-style-type: none"> <li>Check access to the air inlet</li> <li>Set lower temperatures</li> <li>Contact Customer service</li> </ul>
• 07	70	Water pressure too low	<ul style="list-style-type: none"> <li>Water valve closed</li> <li>Water pressure too low</li> <li>Unit defective</li> </ul>	<ul style="list-style-type: none"> <li>Open the water valve</li> <li>Contact Customer service</li> </ul>
• 07	71	WaveClean cancelled	<ul style="list-style-type: none"> <li>Water valve closed</li> <li>Water pressure too low</li> <li>Power failure during WaveClean</li> <li>Unit defective</li> </ul>	<ul style="list-style-type: none"> <li>Open the water valve</li> <li>Contact Customer service</li> </ul>

## 6.3 Nameplate

When contacting Customer service, please always provide the following data from the nameplate:

Serial number (SN)	
Type number (TYP)	

### 6.4 Determining software version

**Requirements** The unit is on

1. Turn the *Select* knob to the *Settings* symbol.
  - ↳ The indicator light illuminates.
  - ↳ The left display shows "PASS".
  - ↳ The right display flashes "- - - -".
2. Press the *Fan speed* button for 5 seconds.
  - ↳ The left display and right display show the current software version.

## 7 Carrying out maintenance

The manufacturer recommends professional maintenance of the unit by trained technical personnel at maintenance intervals of 12 months. With heavier use, a maintenance interval of 6 months is recommended.

## 8 Dispose of unit in an environmentally responsible manner

The unit has been designed to provide a lifetime of 10 years with average use.



Do not dispose of unit or the unit's components together with non-recyclable waste. If the unit is disposed of together with non-recyclable waste or treated improperly, toxic substances contained in the unit can damage health and pollute the environment.

Dispose of the unit in accordance with local regulations for used appliances. Clarify any open questions with the responsible agencies (for instance, solid waste management).

We are a registered manufacturer at the **elektro-altgeräte register** foundation, and we are listed in the **ear** directory. If required, please contact one of the foundation's disposal agents. (WEEE-Reg.-Nr.DE 19459438)

**Unit** In addition to valuable materials, used electrical and electronic equipment also contains harmful substances that were needed for their operation and safety.

**Cleaning agents** Dispose of leftover cleaning agents and cleaning agent containers in accordance with the information provided by the cleaning agent's manufacturer. Observe applicable regional regulations.

# 9 Manufacturer's declaration



## EC Declaration of Conformity



### Manufacturer

MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG • Halberstädter Straße 2a • 38300 Wolfenbüttel, Germany

We hereby declare, that the following product:

Description of the unit	
Unit for cooking food in commercial applications	
Unit type	
SpaceCombi electric combisteamer	
Type number	
MagicPilot	SKECOD610TG2XX
Classic	SKECOD610CG2XX
X: Equipment feature	

complies with the relevant provisions of the following directives and regulations, but does not contain any assurance of properties:

- Directive 2006/42/EC dated 17 May 2006 on machinery
- Directive 2011/65/EU (RoHS) dated 08 June 2011
- Directive 2014/30/EU dated 26 February 2014 on electromagnetic compatibility
- REGULATION (EC) No. 1935/2004 dated 27 October 2004 on materials and objects, which are intended to come into contact with food

Adduced basis for verification
DIN EN 55014-1:2012-05
EN 55014-2:2015
EN 60335-1:2012
EN 60335-2-42: 2003 +A1:2008 + A11:2013
EN 61000-3-3:2013
EN 61000-3-2:2014
EN 61000-4-16:1998 + A1 :2004 + A2:2011
EN ISO 12100:2010

The manufacturer bears the sole responsibility for issuing this Declaration of Conformity. This Declaration of Conformity becomes invalid, if changes are made which are not agreed with us.

Translation from the original document • 10000008480KONDEA

Wolfenbüttel, 05/03/2020

Person authorised to compile the technical documents:

ppa. Peter Helm, Chief Technical Officer (address as manufacturer)

10000008069ABEBEF





EC Declaration of Conformity



**Manufacturer**

MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG • Halberstädter Straße 2a • 38300 Wolfenbüttel, Germany

We hereby declare, that the following product:

Description of the unit		
Unit for cooking food in commercial applications		
Unit type		
Junior electric combisteamer		
Type number		
MagicPilot	SKECOD623TG2XX	
Classic	SKECOD623CG2XX	
		X: Equipment feature

complies with the relevant provisions of the following directives and regulations, but does not contain any assurance of properties:

- Directive 2006/42/EC dated 17 May 2006 on machinery
- Directive 2011/65/EU (RoHS) dated 08 June 2011
- Directive 2014/30/EU dated 26 February 2014 on electromagnetic compatibility
- REGULATION (EC) No. 1935/2004 dated 27 October 2004 on materials and objects, which are intended to come into contact with food

Adduced basis for verification	
DIN EN 55014-1:2012-05	
EN 55014-2:2015	
EN 60335-1:2012	
EN 60335-2-42: 2003 +A1:2008 + A11:2013	
EN 61000-3-3:2013	
EN 61000-3-2:2014	
EN 61000-4-16:1998 + A1 :2004 + A2:2011	
EN ISO 12100:2010	

The manufacturer bears the sole responsibility for issuing this Declaration of Conformity. This Declaration of Conformity becomes invalid, if changes are made which are not agreed with us.

Translation from the original document • 10000008480KONBEA

Wolfenbüttel, 05/03/2020

Person authorised to compile the technical documents:

ppa. Peter Helm, Chief Technical Officer (address as manufacturer)





Declaration of Conformity



**Manufacturer**

MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG • Halberstädter Straße 2a • 38300 Wolfenbüttel, Germany

We hereby declare, that the following product:

Description of the unit		
Unit for cooking food in commercial applications		
Unit type		
SpaceCombi electric combisteamer		
Type number		
MagicPilot	SKECOD610TG2XX	
Classic	SKECOD610CG2XX	
		X: Equipment feature

complies with all relevant provisions of the following Directives and Regulations. Furthermore, this declaration does not contain any assurance of characteristics or properties.

- Directive 2006/42/EC dated 17 May 2006 on machinery
- Directive 2011/65/EU (RoHS) dated 08 June 2011
- Electromagnetic Compatibility Regulations 2016
- REGULATION (EC) No. 1935/2004 dated 27 October 2004 on materials and objects, which are intended to come into contact with food

Adduced basis for verification	
DIN EN 55014-1:2012-05	
EN 55014-2:2015	
EN 60335-1:2012	
EN 60335-2-42: 2003 +A1:2008 + A11:2013	
EN 61000-3-3:2013	
EN 61000-3-2:2014	
EN 61000-4-16:1998 + A1 :2004 + A2:2011	
EN ISO 12100:2010	

The manufacturer bears the sole responsibility for issuing this Declaration of Conformity. This Declaration of Conformity becomes invalid, if changes are made which are not agreed with us.

Wolfenbüttel, 09/11/2022

Person authorised to compile the technical documents:

ppa. Peter Helm, Chief Technical Officer (address as manufacturer)

10000008069ABEBEF





Declaration of Conformity



**Manufacturer**

MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG • Halberstädter Straße 2a • 38300 Wolfenbüttel, Germany

We hereby declare, that the following product:

Description of the unit	
Unit for cooking food in commercial applications	
Unit type	
Junior electric combisteamer	
Type number	
MagicPilot	SKECOD623TG2XX
Classic	SKECOD623CG2XX
X: Equipment feature	

complies with all relevant provisions of the following Directives and Regulations. Furthermore, this declaration does not contain any assurance of characteristics or properties.

- Directive 2006/42/EC dated 17 May 2006 on machinery
- Directive 2011/65/EU (RoHS) dated 08 June 2011
- Electromagnetic Compatibility Regulations 2016
- REGULATION (EC) No. 1935/2004 dated 27 October 2004 on materials and objects, which are intended to come into contact with food

Adduced basis for verification	
DIN EN 55014-1:2012-05	
EN 55014-2:2015	
EN 60335-1:2012	
EN 60335-2-42: 2003 +A1:2008 + A11:2013	
EN 61000-3-3:2013	
EN 61000-3-2:2014	
EN 61000-4-16:1998 + A1 :2004 + A2:2011	
EN ISO 12100:2010	

The manufacturer bears the sole responsibility for issuing this Declaration of Conformity. This Declaration of Conformity becomes invalid, if changes are made which are not agreed with us.

Wolfenbüttel, 09/11/2022

Person authorised to compile the technical documents:

ppa. Peter Helm, Chief Technical Officer (address as manufacturer)







Declaration of Conformity



**Manufacturer**

MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG • Halberstädter Straße 2a • 38300 Wolfenbüttel, Germany

We hereby declare, that the following product:

Description of the unit		
Unit for cooking food in commercial applications		
Unit type		
SpaceCombi electric combi steamer		
Type number		
MagicPilot	SKECOD610TG2XX	
Classic	SKECOD610CG2XX	
		X: Equipment feature

complies with all relevant provisions of the following Directives and Regulations. Furthermore, this declaration does not contain any assurance of characteristics or properties.

- Directive 2006/42/EC dated 17 May 2006 on machinery
- Directive 2011/65/EU (RoHS) dated 08 June 2011
- Electromagnetic Compatibility Regulations 2016
- REGULATION (EC) No. 1935/2004 dated 27 October 2004 on materials and objects, which are intended to come into contact with food

Adduced basis for verification	
DIN EN 55014-1:2012-05	
EN 55014-2:2015	
EN 60335-1:2012	
EN 60335-2-42: 2003 +A1:2008 + A11:2013	
EN 61000-3-3:2013	
EN 61000-3-2:2014	
EN 61000-4-16:1998 + A1 :2004 + A2:2011	
EN ISO 12100:2010	

The manufacturer bears the sole responsibility for issuing this Declaration of Conformity. This Declaration of Conformity becomes invalid, if changes are made which are not agreed with us.

Wolfenbüttel, 09/11/2022

Person authorised to compile the technical documents:

ppa. Peter Helm, Chief Technical Officer (address as manufacturer)





Declaration of Conformity



**Manufacturer**

MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG • Halberstädter Straße 2a • 38300 Wolfenbüttel, Germany

We hereby declare, that the following product:

Description of the unit	
Unit for cooking food in commercial applications	
Unit type	
Junior electric combisteamer	
Type number	
MagicPilot	SKECOD623TG2XX
Classic	SKECOD623CG2XX
X: Equipment feature	

complies with all relevant provisions of the following Directives and Regulations. Furthermore, this declaration does not contain any assurance of characteristics or properties.

- Directive 2006/42/EC dated 17 May 2006 on machinery
- Directive 2011/65/EU (RoHS) dated 08 June 2011
- Electromagnetic Compatibility Regulations 2016
- REGULATION (EC) No. 1935/2004 dated 27 October 2004 on materials and objects, which are intended to come into contact with food

Added basis for verification
DIN EN 55014-1:2012-05
EN 55014-2:2015
EN 60335-1:2012
EN 60335-2-42: 2003 +A1:2008 + A11:2013
EN 61000-3-3:2013
EN 61000-3-2:2014
EN 61000-4-16:1998 + A1 :2004 + A2:2011
EN ISO 12100:2010

The manufacturer bears the sole responsibility for issuing this Declaration of Conformity. This Declaration of Conformity becomes invalid, if changes are made which are not agreed with us.

Wolfenbüttel, 09/11/2022

Person authorised to compile the technical documents:

ppa. Peter Helm, Chief Technical Officer (address as manufacturer)





[www.mkn.com](http://www.mkn.com)

